

Parts needed to assemble and mount the W7 fastener set


Top nut (N)	
Locking washer (M)	
Power connector (L)	
Bottom nut (K)	
Metal washer (J)	
Top washer (I)	
Bottom washer (H)	
Hollow rod (G)	
Top head (F)	
Arm (E)	
Bottom head (D)	
Plastic base (C)	
Plastic bolt (B)	
Head cable (A)	

Tools needed for mounting:


- allen wrench
- drill
- pliers

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu/uk.


1. Drill a hole with a diameter of 10 mm in the mounting surface. The hole must be next to the cable with a single pole. Connect the end of the cable to the power connector (L).

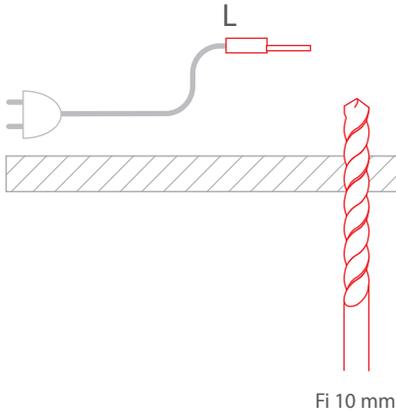

2. Insert the hollow rod (G) into the drilled hole. From the inside, put on in sequence: top washer (I), metal washer (J), bottom nut (K), power connector, locking washer (M), and top nut (N).

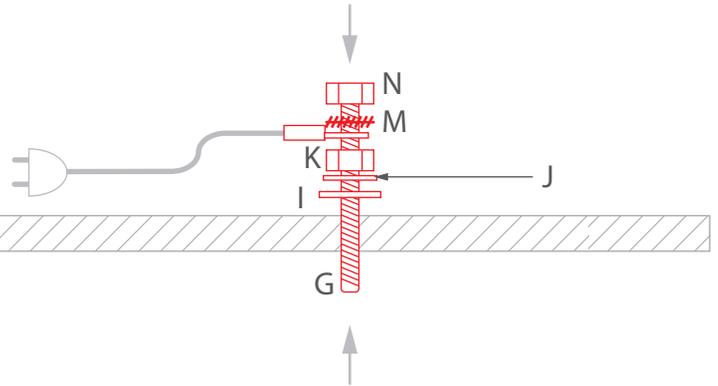


3. Put the bottom washer (H) and the top head (F) on the bottom part of the rod.

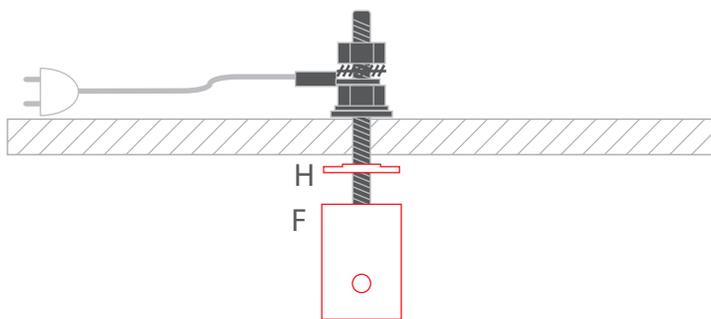

4. Drill a hole with a diameter of 5 mm in the selected extrusion.



5. Bevel the hole so that the plastic screw head fits in.

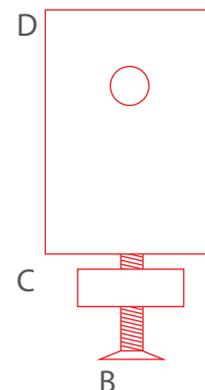

6. Mount the plastic bolt (B), on the top put the plastic base (C) and conductive head (D).

7. Run the cable (A) through the hole in the plastic bolt and connect power to the LED strip.



8. Insert the arm (E) into the mounting bracket of the head. It must press the power cable. Block the rod by tightening the pressure screw in the head with the Allen wrench.



9. Attach the lighting fixture with the arm (E) to the top head (F). Block the arm by tightening the pressure screw in the top head with the Allen wrench.

