


Parts needed to mount the DP-ZO fastener

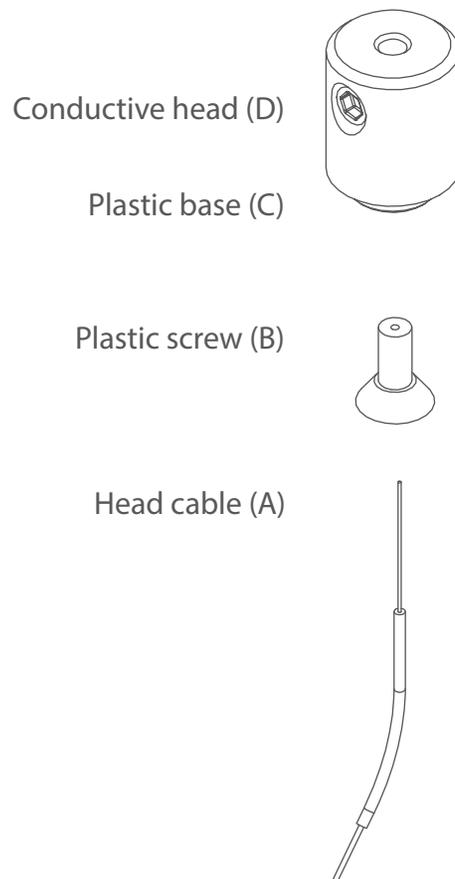


Tools needed for mounting:

- drill
- pliers
- Allen wrench
- soldering tool


NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu

1. Drill a hole with a diameter of 5 mm in the selected extrusion.

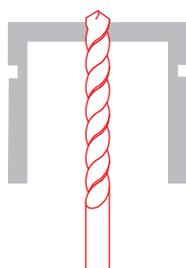


Fi 5 mm


2. Bevel the hole so that the plastic screw head fits in.

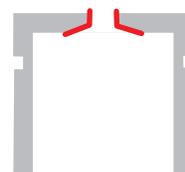


3. Mount the plastic screw (B), on the top mount the assembled plastic base (C) and conductive head (D).

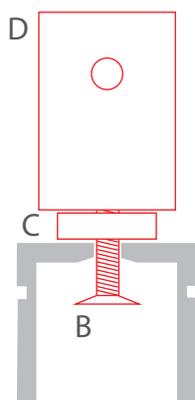

4. Remove the insulation on the section inserted inside the screw and the head. Lead the wire (A) through the hole in plastic screw and the head. Connect the power supply to the LED strip.

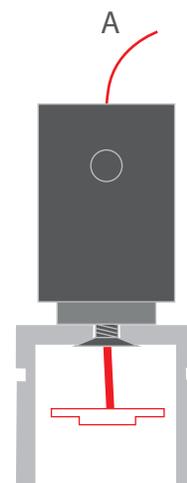

5. Insert the rod into the mounting bracket of the head. It must press the power cable. Block the rod by tightening the pressure screw in the head with the Allen wrench

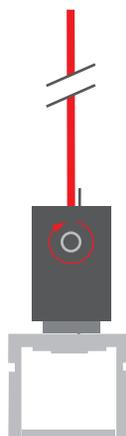

6. Suspend the lighting fixture using a selected suspension and power supply system.

